




Ensure the payload is correctly loaded as per the axle weights for the vehicle being driven

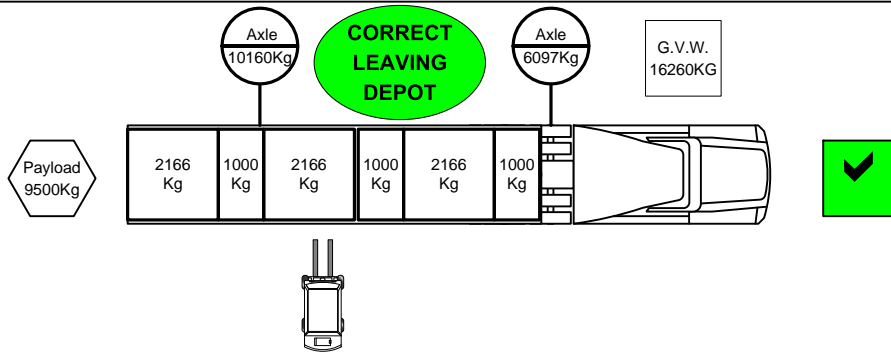

Example 1. Correctly loaded when leaving the depot.

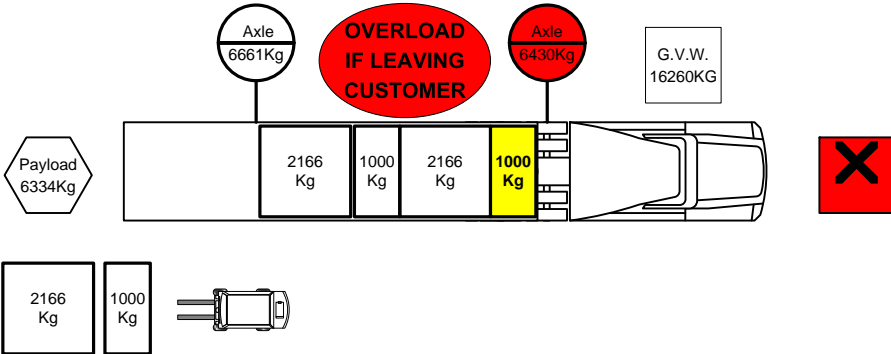

Example 2. Delivery of 3,000 plus Kgs at the rear has overloaded the front axle

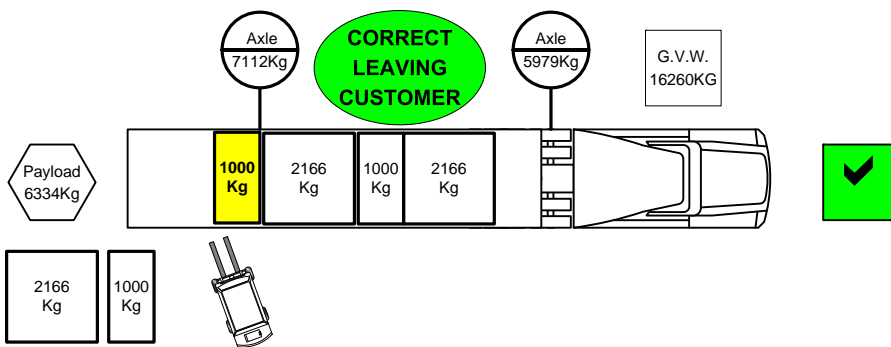

Example 3. Redistributing 1,000 Kgs corrects the overloading of the front axle.

NB. As illustrated by the three examples, care taken by the loaders at home depot or customers will ensure the correct distribution of loads. It is a legal requirement that the **Driver** of the vehicle confirms their load is secure and correctly loaded before driving it on any public road.